

## MICRO DIAPHRAGM GAS PUMPS NMP 830, NMP 850 and NMP 850.1.2



**NMP 830 KNE**



**NMP 850 KNDC**



**NMP 850.1.2 KNDC B**

### Concept

The Micro Diaphragm Gas Pumps from KNF are based on a simple principal - an elastic diaphragm, fixed on its edge, moves up and down its central point by means of an eccentric. In this way the gas is transferred using automatic valves.

The new range of KNF Micro Pumps is for the first time equipped with the stress-optimised diaphragm, resulting in a high pneumatic performance, a durable product and compact size. In addition special valves ensure the minimum resistance to flow.

Thanks to the KNF modular system, the parts used to transfer the gases can be made from materials with varying degrees of compatibility. The pumps can be driven by either AC motor, DC motors or brushless DC motor for long durability.

### Features

#### Uncontaminated flow

No contamination of the media due to oil-free operation

#### Maintenance-free

#### Compact size

#### High pneumatic performance

#### High level of gas tightness

thanks to the closed diaphragm surface and special sealing system

#### Low aerodynamic loss

by means of a new valve system

#### Long product life

#### Ready for assembly

#### Can operate in any installed position

#### For the version with brushless motor the following also apply:

- safe and reliable constant use
- particularly long durability

### Areas of use

KNF Micro Diaphragm Pumps are used frequently in the fields of analysis and medicine.

For instance as pumps for gas measurement, for example for sampling environmental conditions in the workplace, or for exhaust gas and smoke analysis or built into machines for measuring blood pressure.

The AC models are suited for use in machinery which is permanent or mains-operated. Micro Diaphragm Pumps for portable and stand-alone equipment require DC power supplies.

## PERFORMANCE DATA

Type	Delivery (l/min)	Vacuum (mbar absolute)	atm. Press.	Pressure (bar g)	Weight (g)
NMP 830 KNE	1.8	250		1	590
NMP 830 KNDC B	2.5	240		1.4	270
NMP 830 KNDC	3.1	250		1	195
NMP 850 KNDC B	4.2	230		1.5	360
NMP 850 KNDC	4.5	230		1.5	210
NMP 850.1.2 KNDC B	8.0	230		1.5	430



# NMP 830 \_\_ DC B

Version with brushless KNF dc motor

## PERFORMANCE DATA


Type and Order No. <sup>3)</sup>	Brushless dc motor (V)	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g) <sup>2)</sup>	Ultimate vacuum (mbar abs.)
NMP 830 KNDC B	12	2.5	1.4	240
NMP 830 KVDC B	12	2.1	1.4	240
NMP 830 KTDC B	12	2.1	1.3	330
NMP 830 KNDC B	24	2.5	1.4	240
NMP 830 KVDC B	24	2.1	1.4	240
NMP 830 KTDC B	24	2.1	1.3	330

<sup>1)</sup> Litre at STP <sup>2)</sup> Continuous running


To comply with CE standards (EMC guidelines to EN 55014-1), attention must be paid to the specifications in the operating instruction.

## MODEL CODES AND MATERIALS


Type and Order No. <sup>3)</sup>	Pump head	Diaphragm	Valves
NMP 830 KNDC B	PPS	EPDM	CR
NMP 830 KVDC B	PPS	FPM	FPM
Chemically resistant version			
NMP 830 KTDC B	PPS	PTFE coated	FFPM

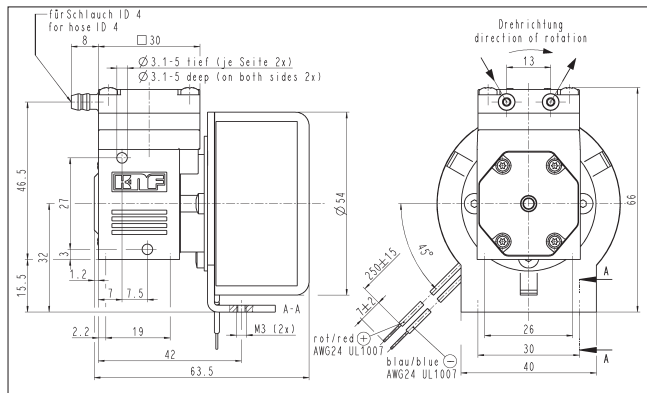


NMP 830 KNDC B

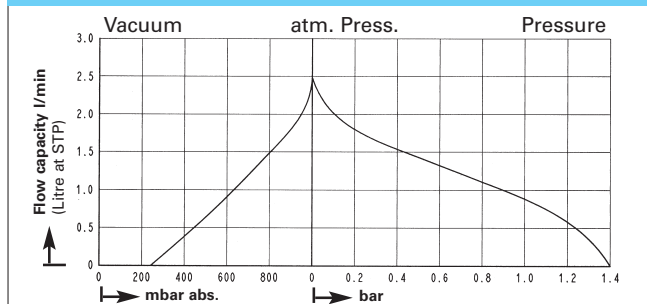

NMP 830 KVDC B

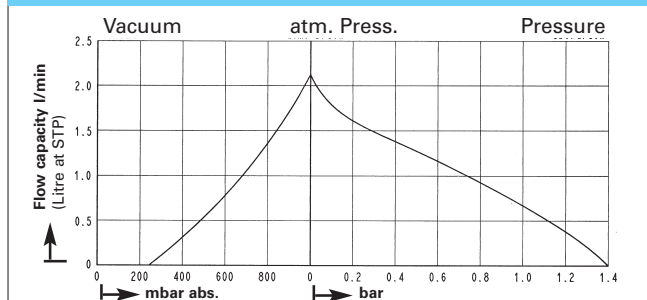

NMP 830 KTDC B

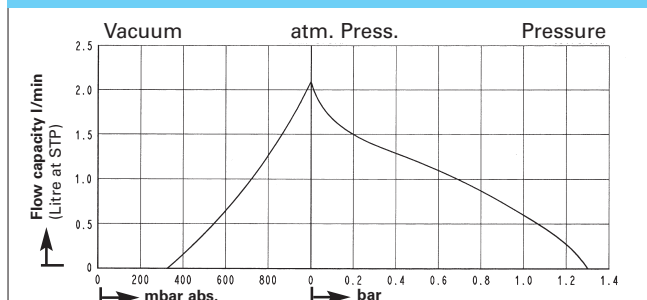

# NMP 850 \_\_ DC


## PERFORMANCE DATA

Type and Order No. <sup>3)</sup>	DC motor (V)	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g) <sup>2)</sup>	Ultimate vacuum (mbar abs.)
NMP 850 KNDC	12	4.5	1.5	230
NMP 850 KTDC	12	3.9	1.5	300
NMP 850 KNDC	24	4.5	1.5	230
NMP 850 KTDC	24	3.9	1.5	300


<sup>1)</sup> Litre at STP <sup>2)</sup> Continuous running

## MODEL CODES AND MATERIALS


Type and Order No. <sup>3)</sup>	Pump head	Diaphragm	Valves
NMP 850 KNDC	PPS	EPDM	EPDM
Chemically resistant version			
NMP 850 KTDC	PPS	PTFE coated	FFPM

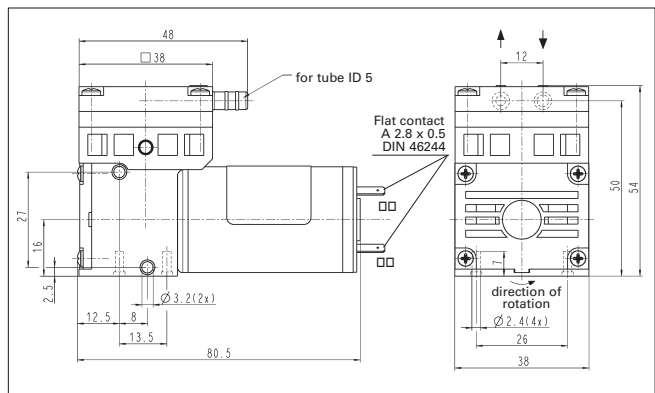

NMP 850 KNDC

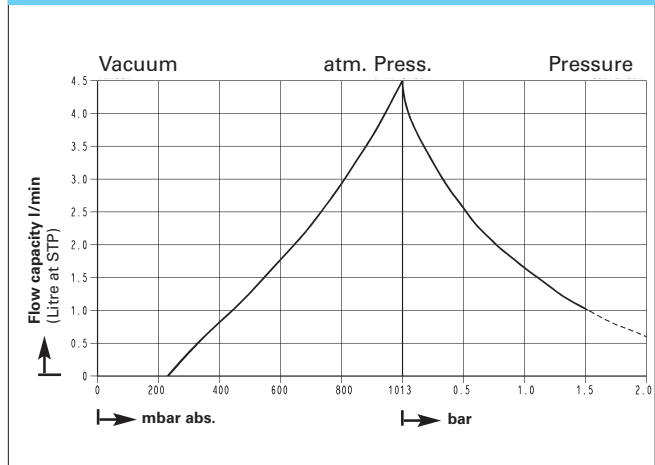

NMP 850 KTDC

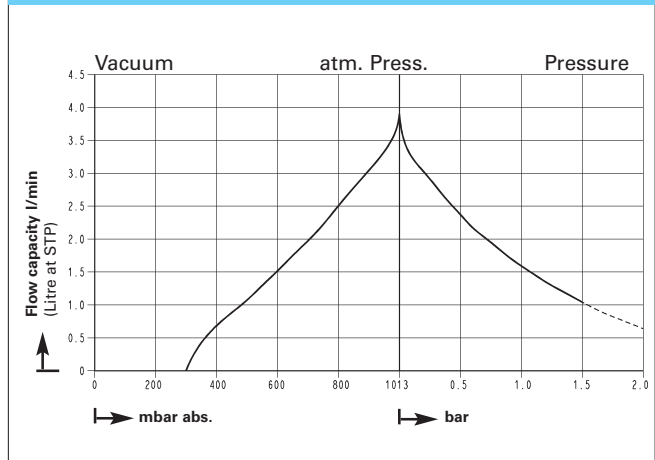

# NMP 850 \_ \_ DC B

Version with brushless KNF dc motor

## PERFORMANCE DATA


Type and Order No. <sup>3)</sup>	Brushless dc motor (V)	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g) <sup>2)</sup>	Ultimate vacuum (mbar abs.)
NMP 850 KNDC B	12	4.2	1.5	230
NMP 850 KTDC B	12	3.5	1.5	300
NMP 850 KNDC B	24	4.2	1.5	230
NMP 850 KTDC B	24	3.5	1.5	300

<sup>1)</sup> Litre at STP <sup>2)</sup> Continuous running


To comply with CE standards (EMC guidelines to EN 55014-1), attention must be paid to the specifications in the operating instruction.

## MODEL CODES AND MATERIALS


Type and Order No. <sup>3)</sup>	Pump head	Diaphragm	Valves
NMP 850 KNDC B	PPS	EPDM	EPDM
Chemically resistant version			
NMP 850 KTDC B	PPS	PTFE coated	FFPM

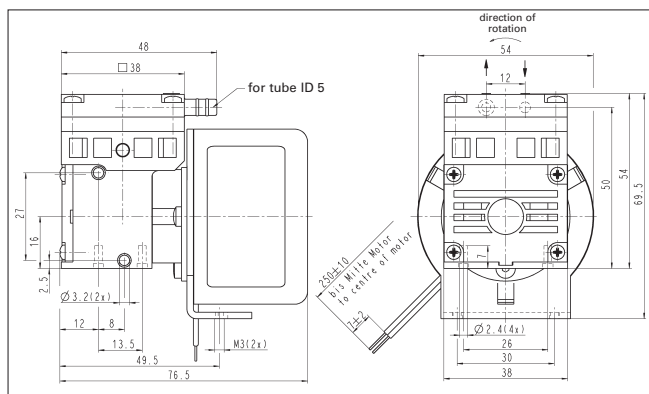

## NMP 850 KNDC B

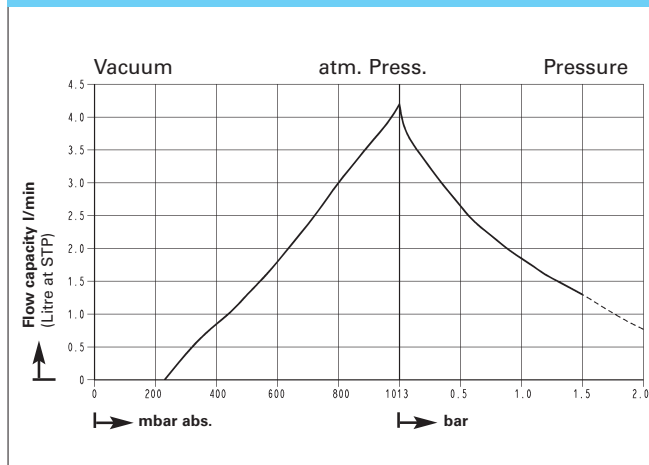

## NMP 850 KTDC B

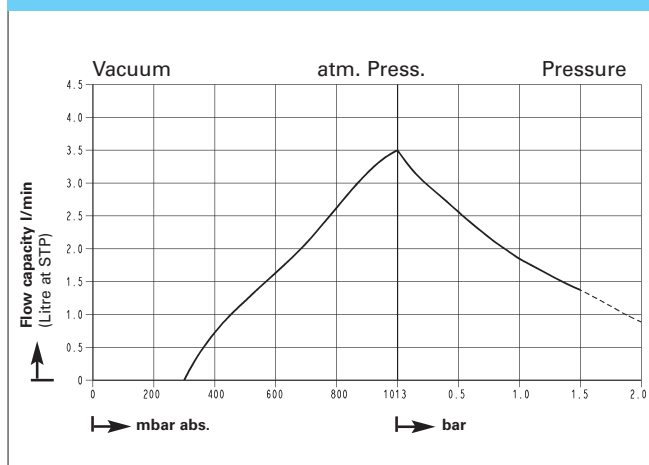

# NMP 850.1.2 KNDC B

Version with brushless KNF dc motor

## PERFORMANCE DATA



Type and Order No. <sup>3)</sup>	Brushless dc motor (V)	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g) <sup>2)</sup>	Ultimate vacuum (mbar abs.)
NMP 850.1.2 KNDC B	12	8.0	1.5	230
NMP 850.1.2 KNDC B	24	8.0	1.5	230

<sup>1)</sup> Litre at STP <sup>2)</sup> Continuous running


To comply with CE standards (EMC guidelines to EN 55014-1), attention must be paid to the specifications in the operating instruction.

## MODEL CODES AND MATERIALS

Type and Order No. <sup>3)</sup>	Pump head	Diaphragm	Valves
NMP 850.1.2 KNDC B	PPS	EPDM	EPDM

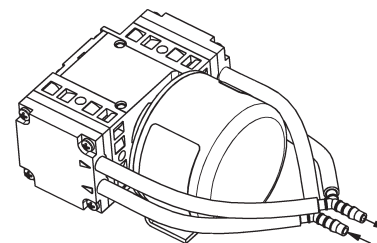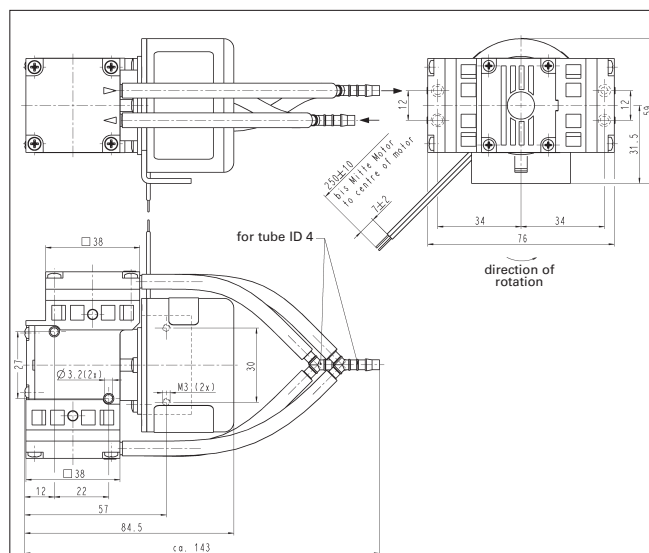

## NMP 850.1.2 KNDC B

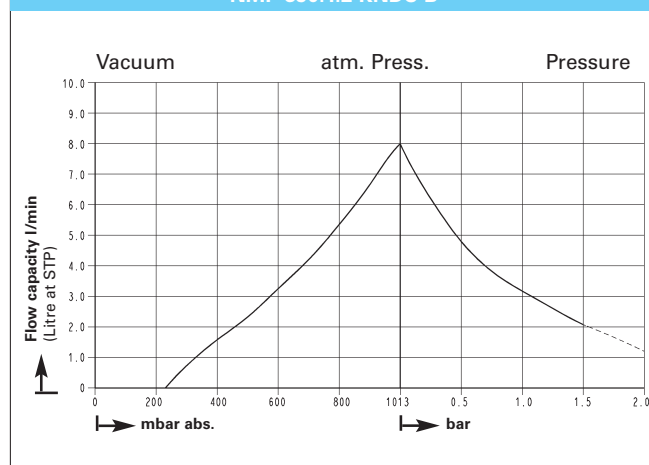


## HINTS ON FUNCTION, INSTALLATION AND SERVICE

### FUNCTION OF KNF DIAPHRAGM VACUUM PUMPS AND COMPRESSORS

An elastic diaphragm is moved up and down by an eccentric (see illustration). On the down-stroke it draws the air or gas being handled through the inlet valve. On the up-stroke the diaphragm forces the medium through the exhaust valve and out of the head. The compression chamber is hermetically separated from the drive mechanism by the diaphragm. The pumps transfer, evacuate and compress completely oil-free.

#### Diaphragm pump

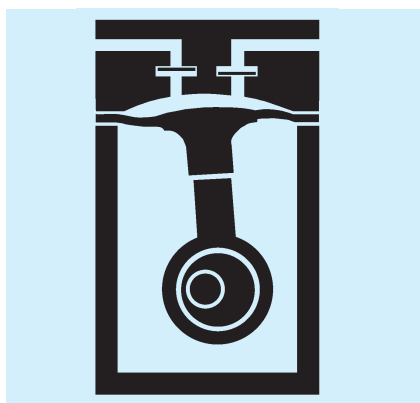

### HINTS ON INSTALLATION AND OPERATION

- Range of use:  
Transferring air and gases at temperatures between + 5 °C and + 40 °C
- Please check the compatibility of the materials of the pump head, diaphragm and valves with the medium.
- The KNF product line contains pumps suitable for pumping aggressive gases and vapors - please contact us.
- Permissible ambient temperature: between + 5 °C and + 40 °C
- The standard pumps are not suitable for use in areas where there is a risk of explosion. In these cases there are other products in the KNF program - please ask us for details
- The pumps are not designed to start against pressure or vacuum; when a pump is switched on the pressure in the suction and pressure lines must be atmospheric. Pumps that start against pressure or vacuum are available on request
- To prevent the maximum operating pressure being exceeded, restriction or regulation of the air flow should only be carried out in the suction line

- Components connected to the pump must be designed to withstand the pneumatic performance of the pump
- Install the pump so that the fan can draw in sufficient cooling air
- Fit the pump at the highest point in the system, so that condensate cannot collect in the head of the pump - that prolongs working-life.

### TECHNICAL DETAILS

Motors with other voltages and frequencies on request.

### HINTS ON SERVICE

The diaphragm and valve plates are the only parts of the KNF diaphragm pumps subject to wear. They are easy to change, as no special tools are needed.

If you have any questions, please call our application engineers (see below for contact telephone number).

### MODEL CODE FOR EASY ORDERING

The model code is identical to the order number. It is made up as follows, (sample):

<b>N 830</b>	<b>KN</b>	<b>E or DC</b>	<b>230 V/50 Hz, IP 00 or 12 V</b>
--------------	-----------	----------------	-----------------------------------

- Base model
- Head materials
- OEM Version with ac (E) or dc motor (DC)
- Other motor data eg.: \_\_\_\_\_

In addition the motor data must be given in the purchase order (voltage, frequency, and protection class). In our extensive program you are sure to find the pump you need for your particular application.

KNF reserves the right to make changes.

### ACCESSORIES

Description	Details	Order No.
Filter/silencer	for NMP 830	024805

### KNF Neuberger, Inc.

Two Black Forest Road  
Trenton, NJ 08691-1810  
Tel. 609-890-8600  
Fax 609-890-8323  
[www.knfusa.com](http://www.knfusa.com)



## The KNF-Group worldwide

### Germany

#### KNF Neuberger GmbH

Alter Weg 3  
D-79112 Freiburg  
Tel. +49 7664 5909 0  
Fax +49 7664 5909 99  
info@knf.de  
www.knf.de

### Benelux Netherlands

#### KNF Verder B.V.

Utrechtseweg 4a  
NL-3451 GG Vleuten  
Tel. +31 30 677 92 40  
Fax +31 30 677 92 47  
info@knf-verder.nl  
www.knf-verder.nl

### Benelux Belgium and Luxembourg

#### KNF Verder N.V.

Kontichsesteenweg 17  
B-2630 Aartselaar  
Tel. +32 3 871 96 24  
Fax +32 3 871 96 28  
info@knf.be  
www.knf.be

### China

#### KNF Neuberger Trading

(Shanghai) Co., Ltd.  
No. 36 Lane 1000  
Zhang Heng Road  
Shanghai 201203  
Tel. +86 21 6859 6566  
Fax +86 21 6859 6568  
info@knf.com.cn  
www.knf.com.cn

### France,

#### Marocco, Tunisia, Algeria

#### KNF Neuberger S.A.

4, Bld. d'Alsace Z.I.  
F-68128 Village-Neuf  
Tel. +33 389 70 35 00  
Fax +33 389 69 92 52  
info@knf.fr  
www.knf.fr

### United Kingdom

#### KNF Neuberger U.K., Ltd.

Avenue 2, Station Lane  
Industrial Estate  
Witney, Oxfordshire OX28 4FA  
Tel. +44 1993 77 83 73  
Fax +44 1993 77 51 48  
info@knf.co.uk  
www.knf.co.uk

### India

#### KNF Pumps + Systems (India) Pvt. Ltd.

RAJIV GANDHI INFOTECH PARK,  
Phase 1,  
Ganga Estate, Survey No. 152/2/2,  
Above AXIS BANK,  
Hinjewadi, Pune 411 057  
Tel. +91 20 640 13 923  
+91 20 640 08 923  
Fax +91 20 229 33 923  
info@knfpumps.in  
www.knfpumps.in

### Italy

#### KNF ITALIA S.r.l.

Via Flumendosa, 10  
I-20132 Milano  
Tel. +39 02 272 03 860  
Fax +39 02 272 03 848  
info@knf.it  
www.knf.it

### Japan

#### KNF Japan Co.Ltd.

Across Shinkawa Bldg. Annex 3F,  
1-16-14 Shinkawa, Chuo-ku,  
Tokyo 104-0033  
Tel. +81 3 3551 7931  
Fax +81 3 3551 7932  
info@knf.co.jp  
www.knf.co.jp

### Korea

#### KNF Neuberger Ltd.

Woosan Bldg.Rm#202  
336-4, Hwikyung-Dong  
Dongdaemun-Ku  
130-090, Seoul  
Tel. +82 2 959 0255  
Fax +82 2 959 0254  
knf@knfkorea.com  
www.knfkorea.com

### Sweden, Finland, Denmark, Norway

#### KNF Neuberger AB

Mejerivägen 4  
P.O. Box 44060  
SE-10073 Stockholm  
Tel. +46 8 744 51 13  
Fax +46 8 744 51 17  
info@knf.se  
www.knf.se

### Switzerland Sales

#### KNF Neuberger AG

Stockenstrasse 6  
CH-8362 Balterswil  
Tel. +41 71 973 99 30  
Fax +41 71 973 99 31  
knf@knf.ch  
www.knf.ch

### Switzerland

#### Production Liquid Pumps

#### KNF FLODOS AG

Wassermatte 2  
CH-6210 Sursee  
Tel. +41 41 925 00 25  
Fax +41 41 925 00 37  
info@knf-flodos.ch  
www.knf-flodos.ch

### Switzerland

#### Production Micro Pumps

#### KNF Micro AG

Zeiglimatte 1b  
CH-6260 Reiden  
Tel. +41 62 787 88 88  
Fax +41 62 787 88 99  
info@knf-micro.ch  
www.knf-micro.ch

### Taiwan

#### KNF Neuberger Ltd.

9F-2, No. 24, Lane 123, Section 6,  
Min Chuan East Road  
Neihu District  
Taipei City, 11490  
Tel. +886 2 2794 1011  
Fax +886 2 8792 1648  
knftwn@knftwn.com.tw  
www.knftwn.com.tw

### USA, Canada, South America

#### KNF Neuberger, INC.

Two Black Forest Road  
Trenton, New Jersey 08691-1810  
Tel. +1 609 890 8600  
Fax +1 609 890 8323  
knfusa@knf.com  
www.knfusa.com  
**Latin America**  
Tel. +1 609 649 1010  
gb@knf.com

## Diaphragm Pumps + Systems



KNF Neuberger GmbH



KNF Neuberger, INC.



KNF Micro AG



KNF Neuberger S.A.



KNF FLODOS AG

## The KNF-Production worldwide

### Germany

**KNF Neuberger GmbH**  
Freiburg-Munzingen

### France

**KNF Neuberger S.A.**  
Village-Neuf

### Switzerland

**KNF FLODOS AG**  
Sursee

### Switzerland

**KNF Micro AG**  
Reiden

### USA

**KNF Neuberger, INC.**  
Trenton - New Jersey